

Short side

BALLASTED ROOF SYSTEM BR6





Installation manual


Web: www.hqmount.com

Email: info@hqmount.com

Components

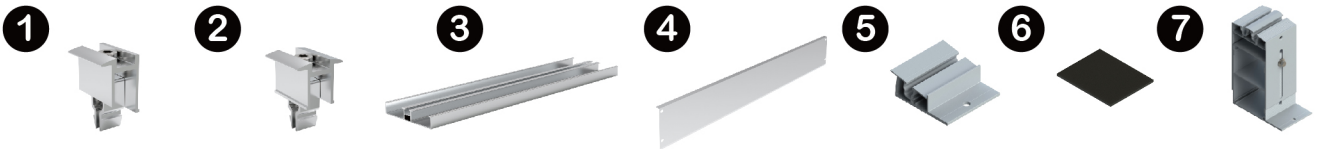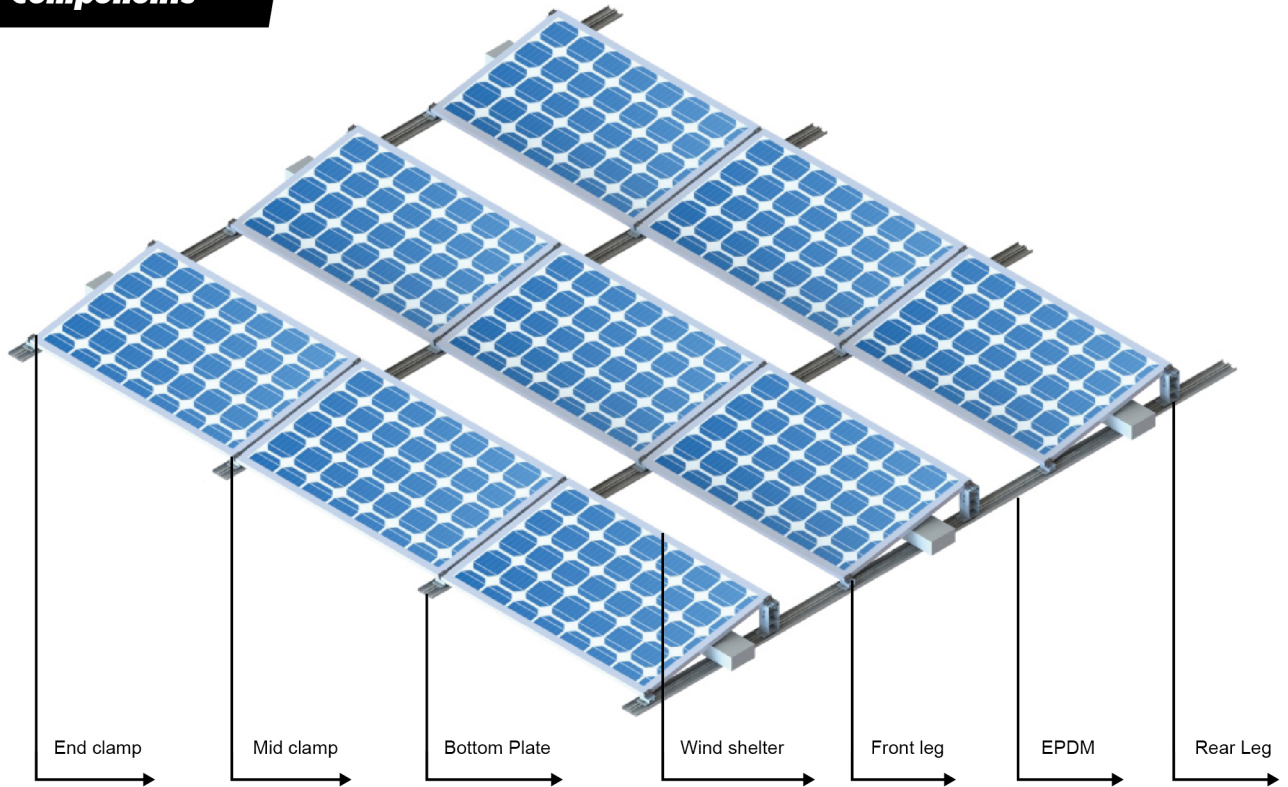

Installation Tools

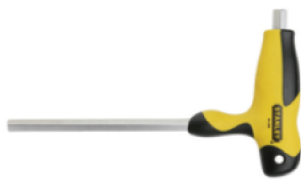

M8 Allen key



Hexagon socket wrench



Electrical drill

Short side BALLASTED ROOF SYSTEM BR6




Installation manual


Web: www.hqmount.com

Email: info@hqmount.com


Step 1 Installation

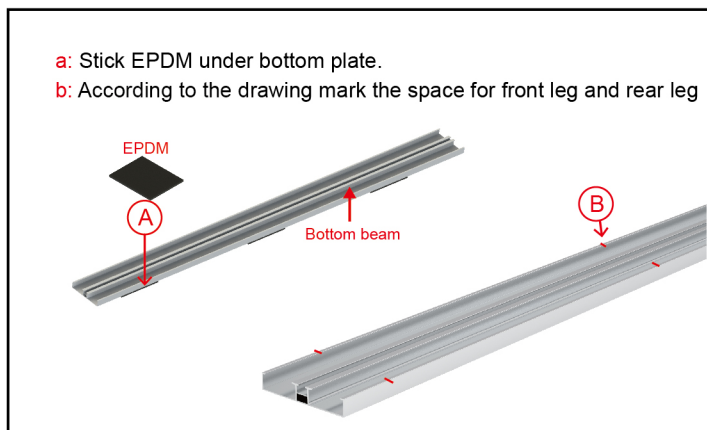


Step 2 Installation

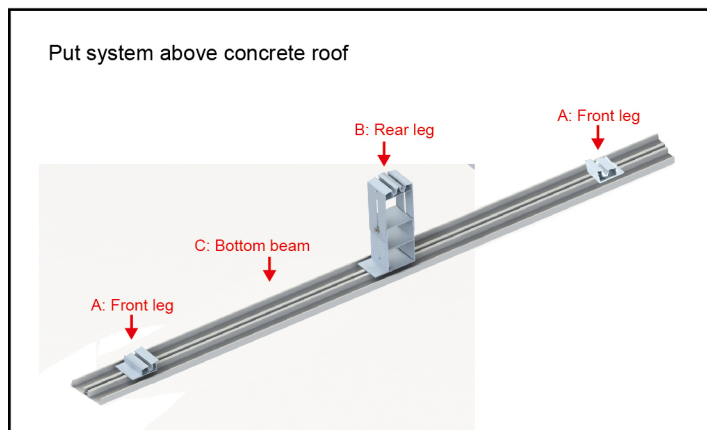


Step 3 Installation-Front leg

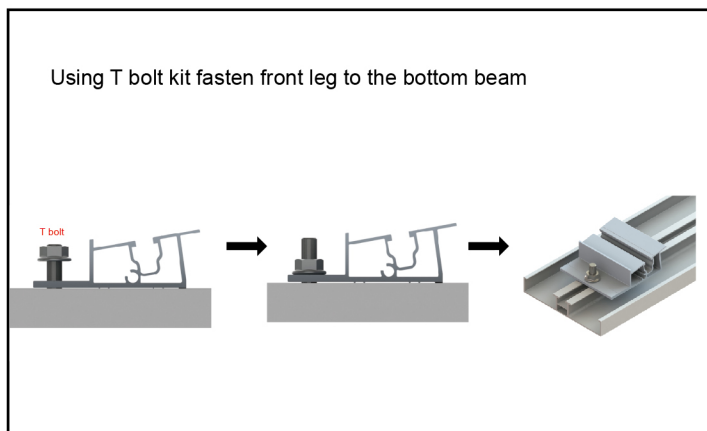

Step 4 Installation Rear leg

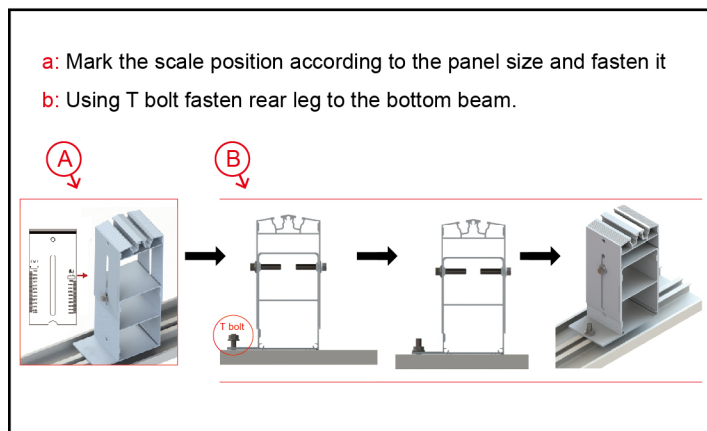

Step 5 Installation-Panel

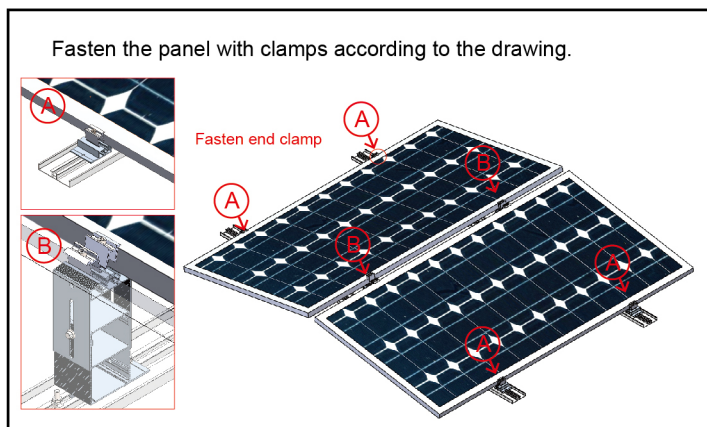

Step 6 Installation-Completed

